

## Controller Operation

### Xbox One Elite Rapid Fire Controller

- At any time the mod can be reset, disabling all features, by holding RT and tapping sync twice.
- Sync your controller with the console as you would with a non-modified Xbox One controller.
- Choose a shots per second (SPS) speed of Rapid Fire by tapping (don't hold) the sync button. Holding down the sync button for extended length of time will initiate the controller to re-sync with the console
- As you tap the sync button the Rapid Fire Mod will cycle through its 4 speeds then off. The SPS speed will be indicated by the Guide LED by the following patterns

SPS speed	LED Blink Pattern
Slower	- - - - -
Moderate	- - - - -
Fast	- - - - -
Max Speed	- - - - -
Mod off	On constantly

#### To Activate Advanced Modes and Features:

Auto Aim	Hold LT & tap sync 1 time
Akimbo	Hold LT & tap sync 2 times
Quick Scope	Hold LT & tap sync 3 times
Drop Shot	Hold <b>B</b> & tap sync 1 time
Burst Fire	Hold <b>B</b> & tap sync 2 times



- When enabling a feature the guide LED will flash quickly for 1 second to indicate a new feature has been activated then return to the present SPS speed's respective blinking pattern
- When disabling a feature the guide LED will flash quickly for ½ second to indicate a feature has been deactivated then return to the present SPS speed's respective light blinking pattern
- Auto Aim, Akimbo, and Quick Scope can only be activated simultaneously with Drop Shot and/or Burst Fire, but not simultaneously with each other.
- Burst Fire has 4 submodes which allow the user to select the number of shots fired per trigger pull. The modes are selected by double tapping sync and indicated by LED blinking patterns just like Rapid Fire adjustment.

# Controller Operation

## Xbox One Elite Rapid Fire Controller

### Definitions of Terms

#### **Automatic Weapon:**

An automatic firearm is any firearm that will continue to fire so long as the trigger is pressed and held and there is ammunition in the magazine/chamber.

#### **Semiautomatic Weapon:**

Semi-automatic firearms do not automatically fire an additional round until the trigger is released and re-pressed by the person firing the weapon.

#### **Stealth Mod:**

A modified controller with no additional buttons or added external features. A controller may be considered stealth with changed LEDs or aesthetic (graphical) cases.

#### **Rapid Fire:**

The capability of a semiautomatic weapon to fire at the rate of an automatic.

#### **Burst Fire:**

A weapon fires a set number of rounds (usually 2-4) with a single depression of the trigger.

#### **Auto Aim:**

As the trigger is depressed the weapon automatically takes aim through the weapon sights or optic. This substantially enhances the accuracy of the weapon. (Not to be confused with Zombie Auto Aim)

#### **Quick Scope:**

As the Left Trigger (scope button) is depressed your character aims down the scope and fires a single shot.

#### **Akimbo:**

The ability to dual wield weapons by depressing the Right Trigger only. May be used in conjunction with rapid fire.

#### **Drop Shot:**

As the player begins to fire the character drops into the prone position and may continue firing.